

# *devolo*

## Home Control Key-Fob Switch



---

first steps

## Thank you for placing your trust in this devolo product.

Carefully read all instructions before setting up the device and store the instructions for later reference.

### Icons



***Very important note. Failure to observe this note may result in damage.***



***Important note that should be observed.***



*Background information and configuration tips for your device.*

### Intended use

Use the Home Control Key-Fob Switch as described in these instructions and in the Home Control online help to prevent damage and injuries.



***Except for occasional battery replacement, the Home Control Key-Fob Switch is completely maintenance-free. The device contains no user-serviceable parts!***

### CE conformity



When used as intended, the product conforms to the basic requirements of the directives 1999/5/EC (R&TTE), 2014/53/EU, 2014/30/EU, 2014/35/EU and the other relevant provisions of the Radio and Telecommunications Terminal Equipment Act (FTEG) and is designed for use in the EU, Switzerland and Norway. A printout of the CE declaration is included.

## devolo Home Control

Home Control (also known as home automation) refers to the specific control of electrically operated indoor household devices. The Home Control system by devolo uses the Z-Wave™ wireless standard.

A Home Control system requires a Z-Wave™-compatible control unit such as the Home Control Central Unit from devolo. Use its Home Control portal to coordinate the Home Control Key-Fob Switch and all other Home Control devices. You can access the Home Control Central Unit through the **my devolo app** and at **www.mydevolo.com** in a browser.

### Accessing the Home Control Central Unit via the my devolo app (for smartphone/tablet)

Open the **my devolo app** ➤ **Home Control** and select your **Home Control Central Unit**.

### Accessing the Home Control Central Unit via web browser (PC/laptop)

At **www.mydevolo.com** ➤ **Home Control** select your **Home Control Central Unit**.

**i** *For more information on the control and configuration of all devolo Home Control devices, as well as application examples, please refer to the Home Control online help.*



***Keep the Home Control Key-Fob Switch out of the reach of children! The Home Control Key-Fob Switch is not a toy.***

## The Home Control Key-Fob Switch

You can use the Home Control Key-Fob Switch for conveniently controlling your Home Control devices at the touch of a button.



***When not using the Home Control Key-Fob Switch, close the keypad to prevent keys from being pressed accidentally. To do so, slide the keypad protector over the keys.***

***To prevent an unsuccessful network search, do not press the Key-Fob Switch keys unless you are within range of your central unit (in your home network). This unnecessarily uses your battery and significantly decreases the runtime.***

## Batteries



***Always keep batteries away from open flame and high temperatures. Avoid direct sunlight and radiant heat!***

***Always remove all batteries from battery-operated devices that are only in storage and are not in use. Old batteries can leak and damage the device!***

***Do not use rechargeable batteries!***



*The Home Control Key-Fob Switch requires a commercially available CR2032 battery (button cell). For information on replacing the battery, please refer to the Home Control online help.*

### Registering the Home Control Key-Fob Switch on the control unit (e.g. Home Control Central Unit)

- ① When you plug in the **Home Control Central Unit** from **devolo**, follow the description in the section **devolo Home Control** on page 3 to call up your **Home Control Central Unit** and select **Devices** ➤ **Add device** ➤ **devolo Home Control Key-Fob Switch**. Follow the instructions there to log into your Home Control Central Unit.



*From now on, you can take electronic control conveniently using the Home Control portal of the Home Control Central Unit.*

*For more information on the control and configuration of all devolo Home Control devices, as well as application examples, please refer to the Home Control online help.*

## Service and warranty

### **Warranty:** 3 years

If your devolo device is found to be defective during initial installation or within the warranty period, please contact the vendor who sold you the product. The vendor will take care of the repair or warranty claim for you. The complete warranty conditions can be found at [www.devolo.com/warranty](http://www.devolo.com/warranty).

Great Britain	0203 024 18 38 (national rate)	support@devolo.co.uk
Sweden	0077 1400 480 (national rate)	support@devolo.se
Finland	972 519 125 (national rate)	support@devolo.fi
Norway	81 500 174 (national rate)	support@devolo.com
Denmark	070 136 001 (national rate)	support@devolo.dk
Other countries	+49 241 70 525 18 (international rate)	support@devolo.com

## Disposal

Neither the Home Control Key-Fob Switch nor the batteries may be disposed of with the household waste. Instead, you can return these at no charge at your municipal collection point or at the retailer (e. g. supermarket, specialist shop).

***devolo***

devolo AG

Charlottenburger Allee 60

52068 Aachen – Germany

[www.devolo.com](http://www.devolo.com)