

devolo

Home Control Smoke Detector



first steps

Thank you for placing your trust in this devolo product.

Carefully read all instructions before setting up the device and store the instructions for later reference.

Icons



Very important note. Failure to observe this note may result in damage.



Important note that should be observed.



Background information and configuration tips for your device.

Intended use

Use the Home Control Smoke Detector as described in these instructions and in the Home Control online help to prevent damage and injuries.

CE conformity



When used as intended, the product conforms to the basic requirements of the directives 2014/53/EU, 2014/35/EU and the other relevant provisions of the Radio and Telecommunications Terminal Equipment Act (FTEG) and is designed for use in the EU, Switzerland and Norway. A printout of the CE declaration is included.

devolo Home Control

Home Control (also known as home automation) refers to the specific control of electrically operated indoor household devices. The Home Control system by devolo uses the Z-Wave™ wireless standard.

A Home Control system requires a Z-Wave™-compatible control unit such as the Home Control Central Unit from devolo. Use its Home Control portal to coordinate the Home Control Smoke Detector and all other Home Control devices. You can access the Home Control Central Unit through the **my devolo app** and at **www.mydevolo.com** in a browser.

i *For more information about setting up the Home Control Central Unit, please refer to the installation guide and/or Home Control online help.*

Accessing the Home Control Central Unit via the my devolo app (for smartphone/tablet)

Open the **my devolo app** ➤ **Home Control** and select your **Home Control Central Unit**.

Accessing the Home Control Central Unit via web browser (PC/laptop)

At **www.mydevolo.com** ➤ **Home Control** select your **Home Control Central Unit**.

i *For more information on the control and configuration of all devolo Home Control devices, as well as application examples, please refer to the Home Control online help.*



The Home Control Smoke Detector

The Home Control Smoke Detector alerts you acoustically with an audible signal, visually via an LED light, via text message, e-mail or an app. Thanks to the mobile and simultaneous notification sent to multiple mobile phone numbers and e-mail addresses that you select, you can respond immediately even when on the go. When combined with other Home Control devices, the Home Control Smoke Detector can, for example, additionally turn on the lights and open the shades via the Home Control Central Unit.





Safety notes

Fasten the Home Control Smoke Detector on the ceiling in the centre of the room or at least 50 cm away from walls, ceiling joists or fixtures.

Fasten the Home Control Smoke Detector as horizontally as possible (inclination angle no more than 20° if there is roof slope).

Pockets of hot air can form in the ceiling ridge in rooms with ceiling slope > 20°. In this case, fasten the Home Control Smoke Detector at least 50 cm and no more than 1 m below a roof/ceiling ridge.

Do not fasten the Home Control Smoke Detector near air ducts or in strong draughts.

Do not fasten the Home Control Smoke Detector in rooms where there is usually heavy steam, smoke or dust.

Install multiple Home Control Smoke Detectors in a room if the surface to be monitored is > 60 m² or is interrupted by ceiling joists.

The Home Control Smoke Detector must not be painted over! Paint clogs the ventilation slots and smoke inlets, making the device incapable of working properly.



Do not use a burning cigarette to test whether the Home Control Smoke Detector is functioning properly! Cigarette smoke clogs the ventilation slots and smoke inlets, making the device incapable of working properly.

Using the test button, regularly check (approx. 1x per month) whether the Home Control Smoke Detector is functioning properly (see section Test alarm on page 10).

Smoke detectors must be replaced every 10 years!

Batteries



Always keep batteries away from open flame and high temperatures. Avoid direct sunlight and radiant heat!

Always remove all batteries from battery-operated devices that are only in storage and are not in use. Old batteries can leak and damage the device!

Do not use rechargeable batteries!

When inserting the battery, make sure the polarity is correct. Using the battery incorrectly can damage the device!




The Home Control Smoke Detector requires a commercially available CR123(A) lithium battery. For information on replacing the battery, please refer to the Home Control online help.

Installing the Home Control Smoke Detector



Only use the Home Control Door/Window Contact indoors.

- ① Turn the detector anti-clockwise to unscrew it from the housing backplate and access the battery compartment.

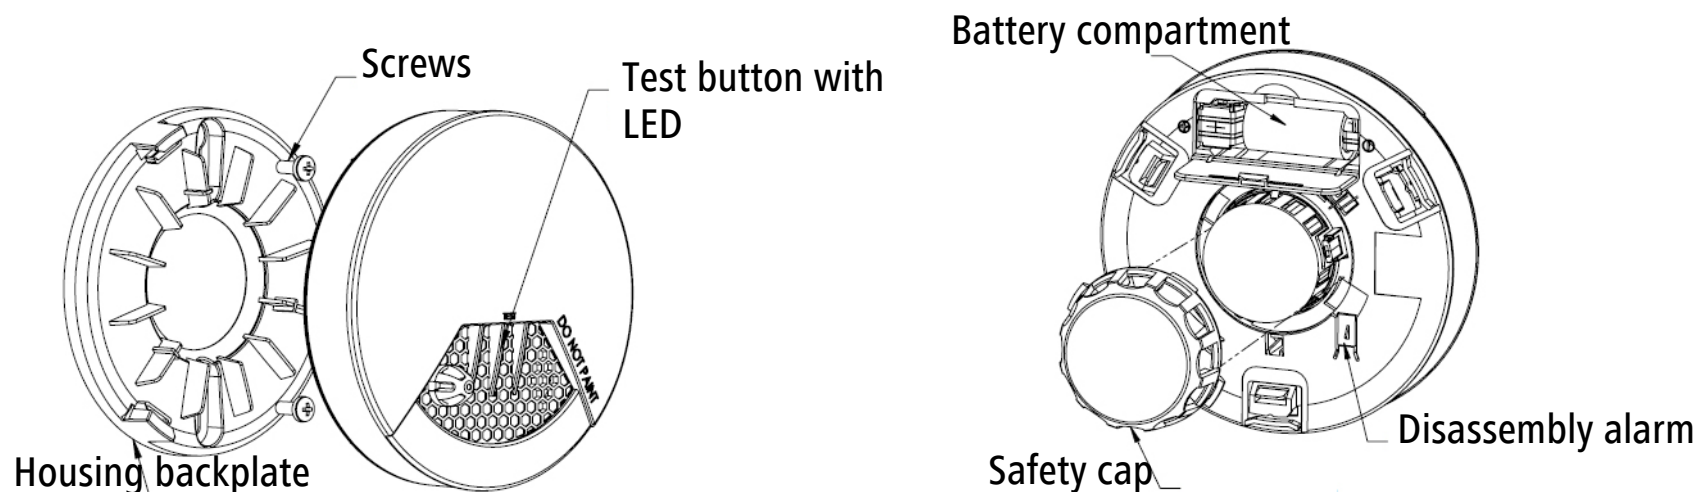

Unscrewing the Home Control Smoke Detector from the housing backplate triggers an alarm (disassembly alarm), which can only be switched off by removing the battery or reattaching the Home Control Smoke Detector to the housing backplate. The alarm tone is loud and shrill and can cause hearing damage. Stay a minimum distance of about 50 cm away from it.



If you are using screws to install it on a ceiling, make sure that no gas, water or power lines in the room's ceiling get damaged. There is a danger of electric shock!

- ② Based on the drilling specifications on the housing backplate, drill holes into the room's ceiling at the desired location and attach the housing backplate using screws.



The disassembly alarm must be pressed in when the Home Control Smoke Detector is mounted.

- ③ Now put the battery in the **correct position** (see marking in the battery compartment) in the Home Control Smoke Detector.



When you insert the battery, it pushes down the red locking pin without the use of force. This prevents the battery compartment from being closed without a battery inserted.

- ④ Close the battery compartment cover.
- ⑤ **Within 3 minutes**, turn the detector clockwise onto the housing backplate until it latches. Otherwise, the Home Control Smoke Detector triggers an alarm.
- ⑥ The installation was successful if the LED on the Home Control Smoke Detector flashes yellow once after about 10 seconds and you hear a short alarm tone.

Registering the Home Control Smoke Detector on the control unit (e.g. Home Control Central Unit)

- ⑦ When you plug in the **Home Control Central Unit** from **devolo**, follow the description in the section **devolo Home Control** on page 3 to call up your **Home Control Central Unit** and select **Devices** ➤ **Add device** ➤ **devolo Home Control Smoke Detector**. Follow the instructions there to log into your Home Control Central Unit.

i *From now on, you can take electronic control conveniently using the Home Control portal of the Home Control Central Unit.*

For more information on how to control and configure all devolo Home Control devices, as well as for application examples, please refer to the Home Control online help.

Test alarm

- ⑧ Keep the button pressed until you hear the alarm tone and the LED flashes red.
- ⑨ To switch off the alarm again, simply release the button.



The device creates a loud and shrill alarm tone that can cause hearing damage. Stay a minimum distance of about 50 cm away from it when testing its function.

Service and warranty

Warranty: 3 years

If your devolo device is found to be defective during initial installation or within the warranty period, please contact the vendor who sold you the product. The vendor will take care of the repair or warranty claim for you. The complete warranty conditions can be found at www.devolo.com/warranty.

Great Britain	0203 024 18 38 (national rate)	support@devolo.co.uk
Sweden	0077 1400 480 (national rate)	support@devolo.se
Finland	972 519 125 (national rate)	support@devolo.fi
Norway	81 500 174 (national rate)	support@devolo.com
Denmark	070 136 001 (national rate)	support@devolo.dk
Other countries	+49 241 70 525 18 (international rate)	support@devolo.com

Disposal

Neither the Home Control Smoke Detector nor the battery may be disposed of with the household waste. Instead, you can return these at no charge at your municipal collection point or at the retailer (e. g. supermarket, specialist shop).

devolo

devolo AG

Charlottenburger Allee 60

52068 Aachen – Germany

www.devolo.com