

WARNINGS AND CAUTIONS:


- ON/OFF LED for remote load status.
- To be installed and/or used in accordance with appropriate electrical codes and regulations.
- If you are unsure about any part of these instructions, consult a qualified electrician.
- Vizia RF +™ VRCZ4 remote does not control the load, but provides scene applications to operate the load.
- Recommended minimum wall box depth is 2-1/2".

INSTALLING YOUR 4-ZONE CONTROLLER

☒ **NOTE:** Use check boxes when Steps are completed.

Step 1

Step 1 **WARNING: TO AVOID FIRE, SHOCK OR DEATH; TURN OFF POWER at circuit breaker or fuse and test that power is off before wiring!**

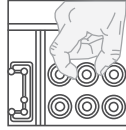

FEATURES

- This is a Z-Wave® Controller
- Zone/Area control without traveler wires
- Can control ON/OFF dim/bright for up to 4 Zones/Area.
- ON/OFF LED
- Two way communication
- RF reliability
- Ease of installation — No new wiring
- Compatible with other Z-Wave® enabled devices

Tools needed to install your 4-Zone Controller:

Slotted/Phillips Screwdriver
Pencil
Electrical Tape
Cutters
Pliers
Ruler

Changing the color of your 4-Zone Controller:

Your 4-Zone controller includes three color options. The controller ships with the White frame attached. To change color of frame, proceed as follows:



After frame is removed, remove existing push buttons by pressing out buttons from back of frame and replace them with desired color change push buttons by pressing in from front of frame. To make IR capable, use new DIM/BRIGHT button with IR window.

Side Wire Connection

Side wire terminals accept
#14 AWG solid wire copper only.

- Make sure that the ends of the wires from the wall box are **straight (cut if necessary)**.

Back Wire (either hole may be used)

Back wire openings use solid wire copper only.

Step 4

 
2000


Step 7

Restore power at circuit breaker or fuse.
Installation is complete.

Step 8 Including 4-Zone Controller into Z-Wave® Network:

NOTES:

- If using a non-LED Programmer/Remote, refer to the Programmer/Remote instruction sheet.
 - Z-wave controllers included into a 4-Z-Wave™ network must be updated after you have included all other devices.
 - If using VRCPG install checklist go directly to step B.
- A) If using VRCPG 4-Z-Wave™ Programmer/Remote, Cat. No. VRCPG, press the Menu button and scroll down to System Setup. Press the center button to select System Setup Menu. Choose Advance Settings. Press the center button to select Network. Press the center button to -Include Nodes-**
- B) If using VRCPG Programmer/Remote, you will be prompted to place 4-Z-wave controller into programming mode.**
- C) To access Program mode, press and hold the left button and the right button (refer to figure). Wait 5 seconds and the LED will blink. Release the buttons and the LED will flash Amber. You are now in Programming mode. **NOTE:** If the LED on the 4-Z-wave controller turns solid RED while including, there has been a communication error.**
- 

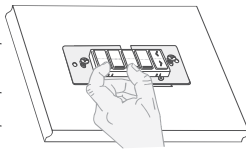

WIRING SWITCH:


Connect wires per WIRING DIAGRAM as follows:

- Green or bare copper wire in wall box to Green terminal screw.
- Line Hot wall box wire to terminal screw marked "BK".
- Line Neutral wall box wire to terminal screw marked "WH".

Step 5


☐ in wall box:

- Position all wires to provide room in outlet wall box for device.
 - Ensure that the word "TOP" is facing up on device strap.
 - Partially screw in mounting screws in wall box mounting holes.
- NOTE:** Dress wires with a bend as shown in diagram in order to relieve stress when mounting device.

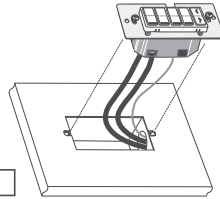


Step 3

☐ This 4-Zone controller can be wired using side wire terminal screws or through backwire openings. Choose appropriate wiring specifications accordingly.

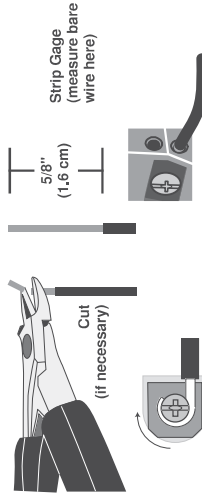

Step 6 4-Zone Controller Mounting:

TURN OFF POWER AT CIRCUIT BREAKER OR FUSE.

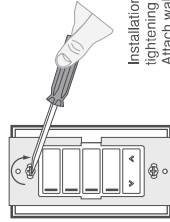



Installation may now be completed by tightening mounting screws into wall box. Attach wallplate.

Step 8 cont'd Including 4-Zone Controller into Z-Wave® Network:

- G) After all devices are included into the network, the controller must be updated to allow proper network function. To update controller proceed as follows:
- If using a non-Leviton Programmer/Remote, refer to the Programmer/Remote instruction sheet for updating controller.
 - If using Leviton Z-Wave® Programmer/Remote, Cat. No. VRCPG, press the Menu button and scroll down to System Setup. Press the center button to select System Setup Menu. Choose Advance Settings. Press the center button to select Network. Press the center button to select Update "cntrl". When prompted, press desired button on 4-Zone controller.
 - Wait until the VRCPG Programmer/Remote confirms completion. Update is done.

NOTE: If the 4-Zone controller has been successfully included in the network and the user tries to include it again without first excluding it from the network, the controller will retain the first node ID it had received and ignore the second.

Programmer/Remote
Cat. No. VRCPG

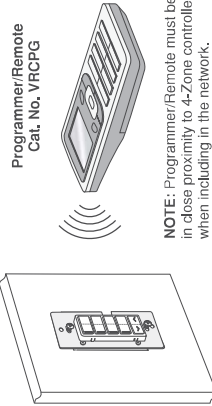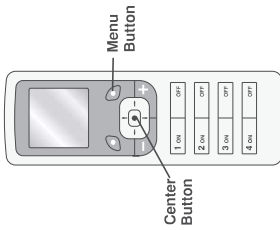

NOTE: Programmer/Remote must be in close proximity to 4-Zone controller when including in the network.

Step 9 Excluding 4-Zone Controller from Z-Wave® Network:

- A) If using a Leviton Z-Wave® Programmer/Remote, Cat. No. VRCPG, press the Menu button and scroll down to System Setup. Press the center button to select System Setup Menu. Choose Advance Settings. Press the center button to select Network. Scroll down to <Exclude Node> and press the center button.
- B) If using VRCPG Programmer/Remote, you will be prompted to place 4-Zone controller into programming mode.
- C) To access Program mode, press and hold the left side of buttons 1 and 3 (refer to figure). Wait 5 seconds until the LED turns Amber. Release the buttons and the LED will blink Amber. You are now in Programming mode.
- NOTE:** If the LED on the 4-Zone controller turns solid Red while excluding, there has been a communication error.
- D) While standing close to the 4-Zone controller (approximately 1 foot), press the center button on the Programmer/Remote to <Exclude> device in the network.

Factory Default:

If your 4-Zone controller is not responding, or you are unable to control it after you have tried to Include/Exclude it multiple times, it may be necessary to reset the 4-Zone controller to its original factory settings. To accomplish this, proceed as follows:

- On the 4-Zone controller (refer to figure), press and hold the left side of buttons 1 and 3. Wait approximately 5 seconds until the locator LED turns Amber and then flashes Red. Release the buttons. The 4-Zone controller is now reset. Once the controller is reset, it will be necessary to Re-Include it to a network before it can be used.

CAUTION: SETTING A DEVICE TO A FACTORY DEFAULT DOES NOT EXCLUDE THAT DEVICE FROM A NETWORK. THE EXCLUSION PROCEDURE MUST STILL BE FOLLOWED TO REMOVE THE DEVICE FROM THE PRIMARY CONTROLLER'S INFORMATION TABLE. FAILURE TO DO SO MAY RESULT IN SYSTEM THAT IS SLOW TO RESPOND, OR MAY FAIL TO RESPOND TO SOME DEVICES.

Step 10 Device Association:

After inclusion process, you must associate the devices to the controllers. Refer to the Primary Programmer/Remote instruction sheet for complete details.

NOTE: One (1) Z-Wave® device can be associated to multiple controllers (up to five (5) controllers maximum).

NOTE: If using a non-Leviton Programmer/Remote, refer to the Programmer/Remote instruction sheet for associating a device.

OPERATION

Push Button (Default settings)

Turn ON from OFF position:
Press left side of button – Turns all lights in Zone/Area ON. LED turns ON.

Turn OFF from ON position:
Press right side of button – Turns all lights in Zone/Area OFF. LED turns OFF.

Dim/Bright:

Press left side of Dim/Bright button - Lights in last activated Zone/Area will dim.

Press right side of Dim/Bright button - Lights in last activated Zone/Area will brighten.

NOTE: Controller will only Dim/Bright devices located within direct Radio Frequency range.

NOTE: LED will be lit Green if any one load in the associated Area is ON. LED will be OFF when all loads are turned OFF.

If there is a power outage, when the power is restored, the lights will return to the last setting before the power interruption.

Cleaning: Clean with a damp cloth.

DO NOT use chemical cleaners.

TROUBLESHOOTING

- **Locator LED on controller does not turn ON**
 - Circuit breaker or fuse has tripped.
 - If 4-Zone controller is powered up and LED does not turn ON, check wiring.
- **Zone Controller does not operate lights**
 - Check association.
 - Ensure that controller was properly updated.
- **If LED turns solid red**
 - Check association.
 - Ensure that each device in the network is within 70 ft (21 m) of another device.


For additional information, contact Leviton's techline at 1-800-824-3005 or visit Leviton's website at www.ViziaRF.com

Protected under U.S. Patent Number 6,388,399 and patents pending and licensed under U.S. Patents Numbers 5,905,442, and 5,982,103

FCC COMPLIANCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving Antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

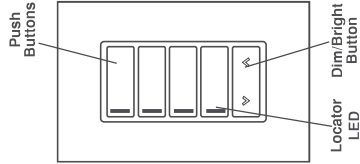

Locator LED
Dim/Bright Button

LIMITED 5 YEAR WARRANTY AND EXCLUSIONS

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that this product at the time of its sale by Leviton is free of defects in materials and workmanship under normal and proper use for five years from the purchase date. Leviton's only obligation is to correct such defects by repair or replacement at its option. If within such five year period the product is returned prepaid, with proof of purchase date, and a description of the problem to Leviton Manufacturing Co., Inc. At: Quality Assurance Department, 59-25 Little Neck Parkway, Little Neck, New York 11362-2591. This warranty excludes and there is disclaimed liability for labor for removal of this product or reinstallation. This warranty is void if this product is installed improperly or in an improper environment, overloaded, misused, abused, or altered in any manner, or is not used under normal operating conditions or not in accordance with any labels or instructions. **There are no other or implied warranties of any kind, including merchantability and fitness for a particular purpose, but if any implied warranty is required by the applicable jurisdiction, the duration of any such implied warranty, including merchantability and fitness for a particular purpose, is limited to five years. Leviton is not liable for incidental, indirect, special, or consequential damages, including without limitation, damage to, or loss of use of, any equipment, lost sales or profits or delay or failure to perform this warranty obligation.** The remedies provided herein are the exclusive remedies under this warranty, whether based on contract, tort or otherwise.

DI-000-VRCZ4-00A-X0