

Flush on/off thermostat

ORDERING CODE	Z-WAVE FREQUENCY
ZMNHIA2	868,4 MHz
ZMNHIA3	921,4 MHz
ZMNHIA4	908,4 MHz
ZMNHIA5	869,0 MHz

This Z-Wave module is used to regulate temperature. The module can be controlled either through Z-wave network or through the wall switch.

The module is designed to be mounted inside a "flush mounting box" and is hidden behind a traditional wall switch.

Module measures power consumption of connected heating device.

Supported switches

Module supports **mono-stable** switches (push button) and **bi-stable** switches. The module is factory set to operate with bi-stable switches.

Installation

- Before the installation disconnect power supply.
- Connect the module according to electrical diagram.
- Locate the antenna far from metal elements (as far as possible).
- Do not shorten the antenna.

Danger of electrocution!

- Module installation requires a great degree of skill and may be performed only by a qualified and licensed electrician.
- Even when the module is turned off, voltage may be present on its terminals. Any works on configuration changes related to connection mode or load must be always performed by disconnected power supply (disable the fuse).


Note!

Do not connect the module to loads exceeding recommended values. Connect the module only in accordance to the below diagrams. Improper connections may be dangerous.

Package contents

- Flush on/off module + Temperature sensor


Electrical diagram 230VAC

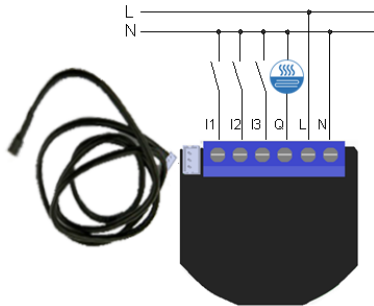

Notes for the diagram:


- N** Neutral lead
- L** Live lead
- Q** Output for heating device
- I3** Input for switch /push button
- I2** Input for switch /push button
- I1** Input for Auto/Off selection
- TS** Terminal for digital temperature sensor (only for Flush on/off thermostat module compatible digital temperature sensor).

Electrical diagram 24VDC

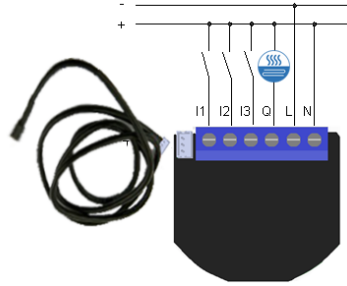

Notes for the diagram:

- N** + 24VDC
- L** - 24VDC
- Q** Output for heating device
- I3** Input for switch /push button
- I2** Input for switch /push button
- I1** Input for Auto/Off selection
- TS** Terminal for digital temperature sensor (only for Flush on/off thermostat module compatible digital temperature sensor).

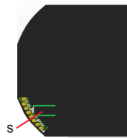

S Service button (used to add or remove module from the Z-Wave network).

Durability of the module relay depends on applied load. For resistive load (light bulbs, etc.) and 10A current consumption of each individual electrical device, the durability exceeds 100 000 switches of each individual electrical device.

Module Inclusion (Adding to Z-wave network)

- Connect module to power supply,
- bring module within maximum 1 meter (3 feet) of the main controller
- enable add/remove mode on main controller
- auto-inclusion (30 minutes after connected to power supply) or
- press service button **S** for more than 2 second or
- press push button **I1** three times within 3s (3 times change switch state within 3 seconds)

Module Exclusion/Reset (Removing from Z-Wave network)

- Connect module to power supply
- bring module within maximum 1 meter (3 feet) of the main controller,
- enable add/remove mode on main controller
- press service button **S** for more than 6 second or
- press push button **I1** five times within 3s (5 times change switch state within 3 seconds).

By this function all parameters of the module are set to default values and own ID is deleted. If service button S is pressed more than 2 and less than 6 second module is excluded, but configuration parameters are not set to default values.

Association

Association enables Flush on/off thermostat module to transfer commands inside Z-Wave network directly (without main controller) to other Z-Wave modules.

Associated Groups:

- Group 1: basic on/off (triggered at change of the output Q state and reflecting its state).
- Group 2: basic on/off (triggered at change of the input I2 state and reflecting its state).
- Group 3: basic on/off (triggered at change of the input I3 state and reflecting its state).
- Group 4: basic on/off (triggered at change of the Alarm too high temperature state and reflecting its state).
- Group 5: basic on/off (triggered at change of the Alarm too low temperature state and reflecting its state).
- Group 6: default reporting group (reserved for the main controller).

Configuration parameters

Parameter no. 1 – Input 1 switch type

- Available configuration parameters (data type is 1 Byte DEC):
- default value 1
 - 0 mono-stable switch type (push button)
 - 1 bi-stable switch type

Parameter no. 2 – Input 2 contact type

- Available configuration parameters (data type is 1 Byte DEC):
- default value 0
 - 0 NO (normally open) input type
 - 1 NC (normally close) input type

Parameter no. 3 – Input 3 contact type

- Available configuration parameters (data type is 1 Byte DEC):
- default value 0
 - 0 NO (normally open) input type
 - 1 NC (normally close) input type

Parameter no. 10 - Activate / deactivate functions ALL ON/ALL OFF

- Available configuration parameters (data type is 1 Byte DEC):
- default value 255
 - 255 - ALL ON active, ALL OFF active.
 - 0 - ALL ON is not active ALL OFF is not active
 - 1 - ALL ON is not active ALL OFF active
 - 2 - ALL ON active ALL OFF is not active
- Flush on/off thermostat module responds to commands ALL ON / ALL OFF that may be sent by the main controller or by other controller belonging to the system.

Parameter no. 30 - Saving the state of the relay after a power failure

- Available configuration parameters (data type is 1 Byte DEC):
- default value 0
 - 0 –module saves its state before power failure (it returns to the last position saved before a power failure)
 - 1 - module does not save the state after a power failure, it returns to "off" position.

Parameter no. 40 – Power reporting in Watts on power change

- Set value means percentage, set value from 0 - 100=0% - 100%. Available configuration parameters (data type is 1 Byte DEC):
- default value 3
 - 0 – Reporting Disabled
 - 1–100 = 1%-100% Reporting enabled.
- Power report is send (push) only when actual power in Watts in real time changes for more than set percentage comparing to previous actual power in Watts, step is 1%.
- NOTE:** if power changed is less than 1W, the

report is not send (pushed), independent of percentage set.

Parameter no. 42 – Power reporting in Watts by time interval

Set value means time interval (0 – 65535) in seconds, when power report is send. Available configuration parameters (data type is 2 Byte DEC):

- default value 300 (power report in Watts is send each 300s)
- 0 – Reporting Disabled
- 1 – 65535 = 1second – 65535 seconds. Reporting enabled. Power report is send with time interval set by entered value.

Parameter no. 43 – Hysteresis On

This parameter defines temperature min difference between real measured temperature and set-point temperature to turn heating on. Parameter can be set from 0 to 255 where 0 to 127 means from 0.0 °C to 12.7 °C and from 128 to 255 means from - 0.0 °C to -12.7 °C.

Available configuration parameters (data type is 1 Byte DEC):

- default value 132 (-0.5 °C)

Parameter no. 44 – Hysteresis Off

This parameter defines temperature min difference between real measured temperature and set-point temperature to turn heating off. Parameter can be set from 0 to 255 where 0 to 127 means from 0.0 °C to 12.7 °C and from 128 to 255 means from - 0.0 °C to -12.7 °C.

Available configuration parameters (data type is 1 Byte DEC):

- default value 5 (+0.5 °C)

Parameter no. 45 – Antifreeze

Set value means at which temperature the heating will be turned on even if the thermostat was manually set to off. Parameter can be set from 0 to 255 where 0 to 127 means from 0.0 °C to 12.7 °C and from 128 to 255 means from - 0.0 °C to -12.9 °C. Available configuration parameters (data type is 1 Byte DEC):

- default value 50 (5,0 °C)

Parameter no. 60 – Minimum Temperature alarm

Available configuration parameters (data type is 2 Byte DEC):

- Default value 50 (Minimum Temperature alarm is 5.0°C)
- 1 - 1000 = 0.1°C – 100.0°C, step is 0.1°C. Minimum temperature alarm is set by entered value. In case is set value out of this range, module is changing set value automatically to default value.

Parameter no. 61 – Maximum Temperature alarm

Available configuration parameters (data type is 2 Byte DEC):

- Default value 700 (Maximum Temperature alarm is 70.0°C)
- 1 - 1000 = 0.1°C – 100.0°C, step is 0.1°C. Maximum temperature alarm is set by entered value. In case is set value out of this range, module is changing automatically set value to default value.

Parameter no. 63 – Switch selection

Set value means the type of the heating device that is connected to the relay output. The heating device type can be normally open (NO) or normally close (NC).

Available configuration parameters (data type is 1 Byte DEC):

- default value 1 (NO)
- 0 – NC
- 1 – NO

Technical Specifications

Power supply	110-230VAC ±10% 50/60Hz, 24-30VDC
Rated load current of AC output (resistive load)	1 X 10A / 230VAC
Rated load current of DC output (resistive load)	1 X 10A / 30VDC
Output circuit power of AC output (resistive load)	2300W (230VAC)
Output circuit power of DC output (resistive load)	240W (24VDC)
Power monitoring accuracy	P=5-50W, +/-3W; P>50W, +/-3%
Frequency Range	868.4 MHz, 921.4 MHz, 908.4 MHz, 869.0 MHz, Z-Wave

Operation temperature	-10 ~ 40°C
Distance	up to 30 meters indoors (depending on building materials)
Dimensions (W x H x D)	41,8 x 36,8 x 15,4mm
Weight	25g
Electricity consumption	0,4W
For installation in boxes	Ø ≥ 60mm or 2M
Switching	relay
Digital temperature sensor range	-50.0 ~ 125.0°C, resolution 0.1°C
Digital temperature sensor cable length	1000mm

* In case of load other than resistive, pay attention to the value of cos φ and if necessary apply load lower than the rated load. Max current for cos φ=0,4 is 3A at 250VAC, 3A at 24VDC L/R=7ms.

Z-Wave Device Class:

GENERIC_TYPE_THERMOSTAT
SPECIFIC_TYPE_SETPOINT_THERMOSTAT

Z-Wave Supported Command Classes:

COMMAND_CLASS_ASSOCIATION,
COMMAND_CLASS_SENSOR_ALARM,
COMMAND_CLASS_BASIC,
COMMAND_CLASS_CRC_16_ENCAP,
COMMAND_CLASS_CONFIGURATION,
COMMAND_CLASS_SENSOR_MULTILEVEL,
COMMAND_CLASS_SENSOR_BINARY

COMMAND_CLASS_VERSION,
COMMAND_CLASS_MANUFACTURER_SPECIFIC,
COMMAND_CLASS_METER,
COMMAND_CLASS_THERMOSTAT_MODE,
COMMAND_CLASS_THERMOSTAT_SETPOINT

COMMAND_CLASS_BASIC

The basic command class supports the functions BASIC SET and BASIC GET. Through the function basic SET is possible to set the mode of the module. Basic SET can send the values 0xff which means Auto and 0x00 which mean Off. Through the function basic GET is possible to read the mode of the module. The module returns 0xff which means Auto or 0x00 which means Off.

COMMAND_CLASS_SENSOR_MULTILEVEL

The Flush on/off thermostat supports reading of actual temperature which is 2 bytes long, scale is °C and its precision is 1(it means 0,1°C).

COMMAND_CLASS_THERMOSTAT_MODE

The Flush on/off thermostat supports the following modes:


- Mode Off
- Mode Auto

COMMAND_CLASS_THERMOSTAT_SETPOINT

The Flush on/off thermostat supports Heating set point, which is 2 bytes long, scale is °C and its precision is 1(it means 0,1°C).

Functionality

To turn the module on or off the user can simply press once on the binary switch I1 or by pressing on the button Auto in the GUI. When the module is turned on it automatically regulated the temperate based on Hysteresis on and Hysteresis off.

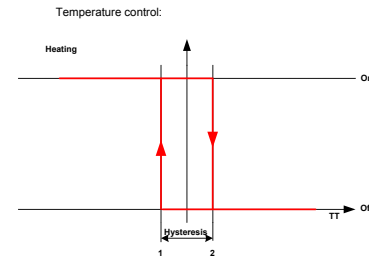

When the temperature is decreasing and reaches point 1 (defined by parameter 43), heating is turned on and remains active until the temperature in the room is not increased to reach point 2 (defined by parameter 44). In this moment heating is turned off.

When heating is turned off, then it is working in antifreeze regime. The antifreeze regime turns on heating when the temperature is lower of equal to the temperature set by parameter 45.

Alarms

Temperature too low alarm is set to logic one when the actual temperature is equal or smaller to the value set by parameter 60.

Temperature too high alarm is set to logic one when the actual temperature is equal or higher to the value set by parameter 61.

Important disclaimer

Z-Wave wireless communication is inherently not always 100% reliable, and as such, this product should not be used in situations in which life and/or valuables are solely dependent on its function.

Warning!

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new once, the retailer is legally obligated to take back your old appliance for disposal at least for free of charge. This user manual is subject to change and improvement without notice.

Qubino

Goap d.o.o. Nova Gorica
Ulica Klementa Juga 007
5250 Solkan
Slovenia

E-mail: info@qubino.com
Tel: +386 5 335 95 00
Web: www.qubino.com



Date: 23.09.2014
Document: Qubino_Flush on/off thermostat user manual_V1.0_eng

Available at www.domotica-shop.nl