

YOUR NEW STRIPS (A)

Your Strips Comfort is a Z-Wave multi-sensor that can be added to any certified Z-Wave system and operate with any Z-Wave device.

Strips Comfort is a discreet temperature and light sensor.

Strips Comfort has a range up to 40 meters. The range can be extended by using any non-battery Z-wave device, which automatically acts as a repeater when placed between Strips Comfort and the controller.



Visit [www.stripsbysensative.com](http://www.stripsbysensative.com) to find out more, including instructional videos or for any support inquiries.

GETTING STARTED (C)

Strips Comfort will now report sensor levels and alarms according to the set configuration (see table A on the backside).

The Comfort kit includes a mounting plate that can be used for hanging Strips Comfort on the wall with screws.

### Mounting Strips Comfort (Figure 5-9)

You may mount Strips Comfort directly on the wall using Strips Comfort's adhesive (**ALT. A**), or use the mounting plate (**ALT. B**):

#### ALT. A

Avoid placing Strips Comfort directly on metal as it affects the range.

Note that Strips Comfort's adhesive is strong and can affect the surface if it is removed.

**A 5** Remove the protective tape from Strips Comfort adhesive.

**A 6** Place Strips Comfort on the wall.

USING YOUR NEW STRIPS

Your Strips Comfort is now mounted and added to your Z-Wave system. It will give you valuable sensor data that may be used for alarms or controlling other devices.

Please note that poor network reliability will affect Strips Comfort's battery life. When Strips Comfort blinks 5 times, this indicates that Strips Comfort failed to communicate with the controller. If it happens frequently you may move the controller closer or add an extender between the controller and Strips Comfort.

Enjoy Strips Comfort for years to come!

You may configure Strips Comfort to better support your needs using the configuration parameters (see Table A on the backside).

Z-Wave is an international standard for wireless communication in smart homes and buildings, enabling you to monitor and control your home remotely.

Strips supports association group 1 (lifecycle). Max 1 node.

Strips uses low power (< 2 dBm) radio signals to communicate with your Z-Wave controller.

The radio frequencies used are: 868.42/869.85 MHz (EU), 908.4/916.0 MHz (US/Can)

GETTING STARTED (B)

### Adding Strips Comfort to your Z-Wave system (Figure 1-4)

Strips Comfort comes in auto-add mode. Follow the process below to add

Strips Comfort to your network:

- 1** Set your Z-Wave controller in add mode. See your controller's manual.
- 2** Keep Strips Comfort within a few meters of its intended location during the add process. Remove the magnet from Strips Comfort.
- 3** Your Z-Wave controller application should now add Strips Comfort.
- 4** You may verify that your controller shows Strips Comfort reporting correctly by exposing it to a light source for 1 minute.

#### ALT. B

- B 5** Remove the protective tape from Strips Comfort's adhesive.
- B 6** Mount Strips Comfort on the marked "Strips side" of the plate.
- B 7** Mark holes for the screws using the template on the backside.
- B 8** Drill 4 mm diameter holes, place the plugs, and mount the screws included in the kit.
- B 9** Hang your Strips Comfort on the screws so that it can be removed again if needed.

#### Hint 1

Note that Strips Comfort is suitable for indoor as well as outdoor use.

#### Hint 2

Save the included magnet. It can be used to wake up/add/remove Strips Comfort. Note that most magnets will work as a replacement.

A) CONFIGURATION PARAMETERS


No.	Description	Values	Default
2	LED alarm event reporting (1byte)	0: Off 1: On	1
3	Temperature & Light reporting frequency (1byte)	1: Normal 2: Frequent	1
4	Temperature reporting (1byte) (Does not affect temperature alarms)	0: Off 1: On	1
5	Temperature reporting unit (1byte)	0: Celsius 1: Fahrenheit	0
6	Temperature alarms (1byte)	0: Off 1: On	0
7	High temperature alarm level (1byte)	-20 to +60 (degree C)	60
8	Low temperature alarm level (1byte)	-20 to +60 (degree C)	-20
9	Ambient light reporting (1byte)	0: Off 1: On 2: Report only when levels defined in parameter 10 & 11 are passed.	1
10	High ambient light report level (4 bytes)	3 - 64 000	40 000
11	Low ambient light report level (4 bytes) (Must be significantly lower than parameter 10)	1 - 42 000	5 000
12	Leakage alarm (1byte)	0: Off 1: On	1
13	Leakage alarm level (1byte)	1 to 100 (1 = almost dry, 100 = wet)	10
14	Moisture reporting period (1byte)	0-120 (Hours between reports)	0 (Off)

B) LED LIGHT SIGNALS


1 short blink	Feedback during execution of user commands (Table C)
2 short	For demo purposes (only if Strips Comfort is not added)
1 long	Acknowledges a user command and a successful transmission of the command.
5 or 10 short	Error (E.g. communication with controller failed)

C) USER COMMANDS

Wake up	Wake up Strips Comfort manually for Z-Wave communication. Place the magnet by the rounded edge, and once the LED blinks, move the magnet away (See figure below). Repeat two more times within 10 seconds.
Add/remove	Set your controller to add/remove mode (see your controller’s manual). Then follow the instruction above for the “Wake up” command.
Reset	You may need to reset Strips Comfort if your Z-Wave controller is missing or not responding. Follow the instructions for “Wake up” above, but on the 3rd repetition, leave the magnet as shown in the figure below (20mm from the rounded edge) for 10 seconds.

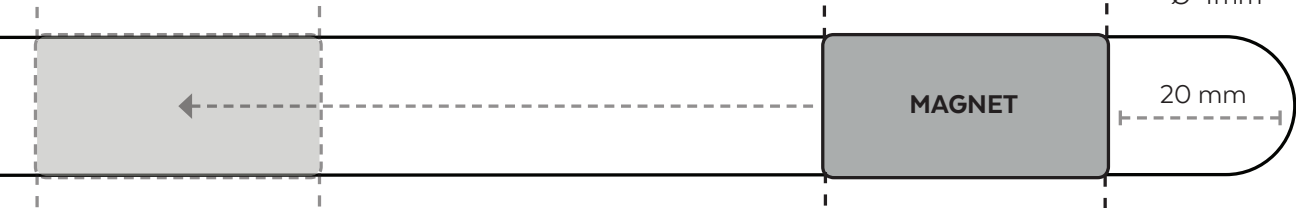

TEMPLATE FOR DRILLING

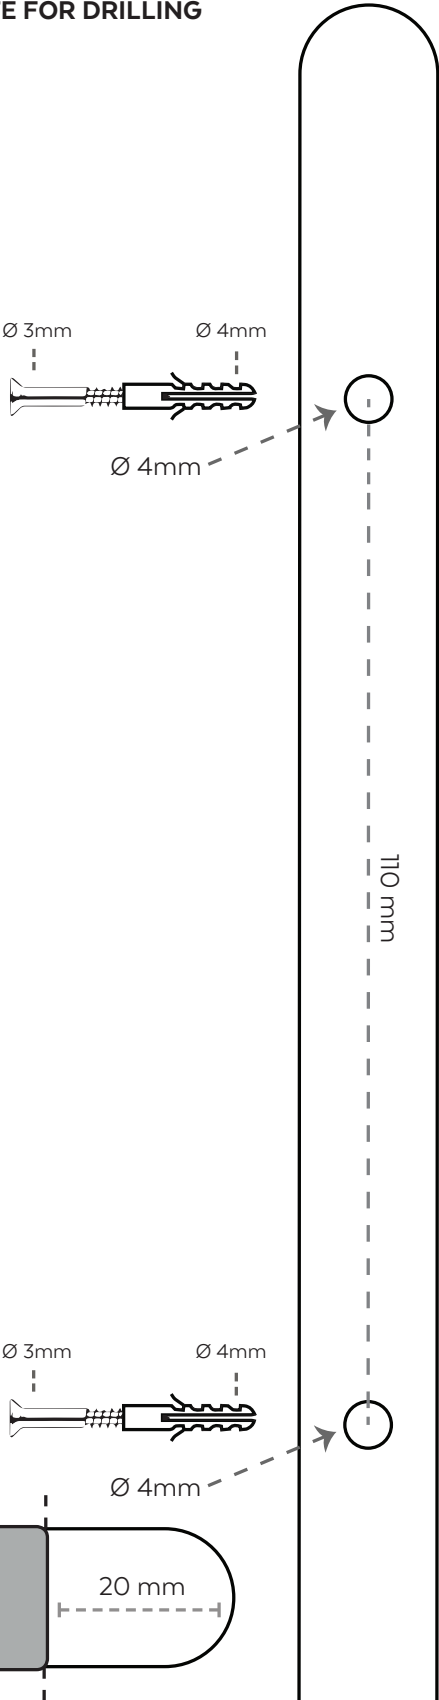

YOUR NEW STRIPS (A)

Your Strips Drip is a Z-Wave multi-sensor that can be added to any certified Z-Wave system and operate with any Z-Wave device.

Strips Drip is a water leak sensor that includes temperature and light sensing options.

Strips Drip's range is up to 40 meters, but can be extended by any non-battery Z-Wave device placed between Strips Drip and the controller as it will automatically act as a repeater to increase reliability and range of your system.



Visit [www.stripsbysensative.com](http://www.stripsbysensative.com) to find out more, including instructional videos or for any support inquiries.

GETTING STARTED (B)

**Adding Strips Drip to your Z-Wave system (Figure 1-4)**

Strips Drip comes in auto-add mode. Follow the process below to add Strips Drip to your network:

- 1 Set your Z-Wave controller in add mode. See your controller's manual.
- 2 Keep Strips Drip within a few meters of its intended location during the add process. Remove the magnet from Strips Drip.
- 3 Your Z-Wave controller application should now add Strips Drip.
- 4 You may verify that your controller shows Strips Drip reporting correctly by holding it firmly according to figure 4 for about 15 seconds. Strips Drip will then sense the proximity and send a leakage alarm.

GETTING STARTED (C)

Strips Drip will now report sensor levels and alarms according to the set configuration (see Table A on the backside).

Strips Drip kit includes a mounting plate with built-in moisture detection pads.

**Mounting Strips Drip (Figure 5-8)**

- 5 Remove the protective tape from Strips Drip adhesive.
- 6 Mount Strips Drip on the marked "Strips side" of the mounting plate.
- 7 Make sure that the surface is clean. You may then remove the protective tape from the mounting plate and place Strips Drip firmly on the surface. Note that the adhesive is permanent and may damage your surface upon removal.
- 8 Place Strips Drip so that the moisture detection pads will soak any leaking water.

USING YOUR NEW STRIPS

Do not remove Strips Drip if a leak occurs. The sensor pads will dry after the water has been removed.

Your Strips Drip is now mounted and added to your Z-Wave system. It will give you valuable sensor data that may be used for alarms or controlling other devices. Strips Drip analyzes the moisture of the pads to indicate leaks.

Please note that poor network reliability will affect Strips Drip battery life. When Strips Drip blinks 5 times, this indicates that Strips Drip failed to communicate with the controller. If it happens frequently you may move the controller closer or add an extender between the controller and Strips Drip.

Enjoy Strips Drip for years to come!

You may configure Strips to better support your needs using the configuration parameters (see Table A on the backside).

Z-Wave is an international standard for wireless communication in smart homes and buildings enabling you to monitor and control your home remotely.

Strips supports association group 1 (lifeline). Max 1 node.

Strips uses low power (< 2 dBm) radio signals to communicate with your Z-Wave controller.

The radio frequencies used are: 868.42/869.85 MHz (EU), 908.4/916.0 MHz (US/Can)

**Hint 1**

To extend the battery life of your Strips Drip you may turn off temperature/light reporting. See instructions on backside for further details.

**Hint 2**

Make sure to save the included magnet. It can be used to wake up/add/remove Strips Drip. Note that most magnets will work as a replacement.

**Hint 3**

There may also be locations where Strips Drip can be placed without using the mounting plate adhesive or by using the screw holes in the mounting plate.

A) CONFIGURATION PARAMETERS


No.	Description	Values	Default
2	LED alarm event reporting (1byte)	0: Off 1: On	1
3	Temperature & Light reporting frequency (1byte)	1: Normal 2: Frequent	1
4	Temperature reporting (1byte) (Does not affect temperature alarms)	0: Off 1: On	1
5	Temperature reporting unit (1byte)	0: Celsius 1: Fahrenheit	0
6	Temperature alarms (1byte)	0: Off 1: On	0
7	High temperature alarm level (1byte)	-20 to +60 (degree C)	60
8	Low temperature alarm level (1byte)	-20 to +60 (degree C)	-20
9	Ambient light reporting (1byte)	0: Off 1: On 2: Report only when levels defined in parameter 10 & 11 are passed.	1
10	High ambient light report level (4 bytes)	3 - 64 000	40 000
11	Low ambient light report level (4 bytes) (Must be significantly lower than parameter 10)	1 - 42 000	5 000
12	Leakage alarm (1byte)	0: Off 1: On	1
13	Leakage alarm level (1byte)	1 to 100 (1 = almost dry, 100 = wet)	10
14	Moisture reporting period (1byte)	0-120 (Hours between reports)	0 (Off)

B) LED LIGHT SIGNALS

1 short blink	Feedback during execution of user commands (Table C)
2 short	For demo purposes (only if Strips Comfort is not added)
1 long	Acknowledges a user command and a successful transmission of the command.
5 or 10 short	Error (E.g. communication with controller failed)

C) USER COMMANDS

Wake up	Wake up Strips Comfort manually for Z-Wave communication. Place the magnet by the rounded edge, and once the LED blinks, move the magnet away (See figure below). Repeat two more times within 10 seconds.
Add/remove	Set your controller to add/remove mode (see your controller’s manual). Then follow the instruction above for the “Wake up” command.
Reset	You may need to reset Strips Comfort if your Z-Wave controller is missing or not responding. Follow the instructions for “Wake up” above, but on the 3rd repetition, leave the magnet as shown in the figure below (20mm from the rounded edge) for 10 seconds.

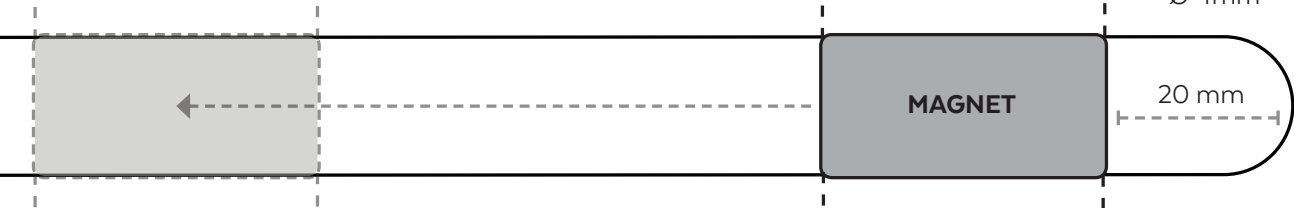

TEMPLATE FOR DRILLING

